




eastwest**designs**

Assembly Instructions – Alpha Compact

Position the head end of the bed approximately where it will finally sit allowing 1 metre clear space on one side.

With the head end sitting against the wall attach the side rails and foot end using the small allen head bolts supplied.
Fit bolts in the top and bottom hole of the bracket.

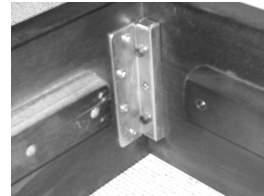

Lifting from the head end, roll the head/rail assembly on its side placing the 45mm packer under the foot end of the side rail to support the rail.

Attach the leg mounting blocks into the 2 foot end corners using the 50mm screws supplied.

Make sure that the blocks are fitted square into the corners.

Attach two legs into the corner blocks and finger tighten the nuts.

Carefully roll the assembly back down. It will sit on the head end and the two legs.

Tighten legs into position.

Move the completed assembly into its final position.

Fit the centre rail into position making sure that the rail is pushed hard down into the brackets.

Attach slats/shoes.

