



eastwestdesigns

Mode/Neo Flexible Slat Frame



Assembly Instructions


1. It is easier to assemble the main frame upside down for access to the leg plates. When the end rails are upside down the centre rail bracket will be at the top of the rail.



2. Join the side rails to the head and foot end rails using the parts supplied for your model bed as shown.




Neo

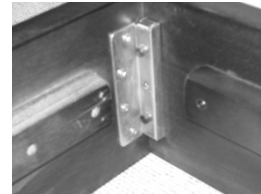

Mode

3. Fit the leg plates to the underside of each corner and attach using the screws supplied.

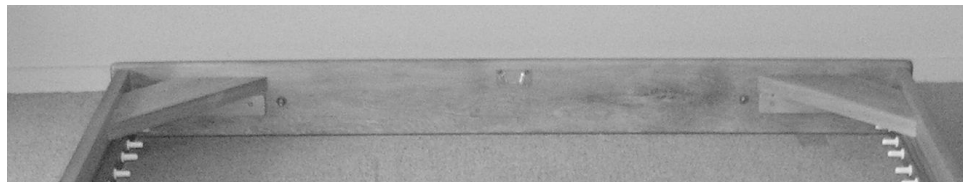

4. Turn the frame over and fit the legs upwards into the holes in the leg plates and fix with the nuts and washers supplied.

5. Fit the centre rail into position by locating the ends of the rail into the central brackets on either end of the bed. **Note:** Make sure the centre rail is fully located into the housing brackets.



Neo/Mode Assembly Instructions cont;

6. Attach the slat housings (shoes) to the centre rail

7. Fit slats into the shoes on the centre rail and then fit shoes to the outer ends of the slats.



8. Fit the outer end shoes to the side rails.

9. If your bed is fitted with the **Pivotech®** slat system make sure that the shoes are firmly set onto the locating pins. Adjust the heads of the shoes to suit. We suggest in the first instance that you set them to a firm position and reduce the firmness as required.

Tip: You will find it easier to adjust the slide by lifting the body of the shoe slightly.



10. Whether you are fitting a headboard to your frame now or in the future, we suggest you fit the supplied headboard attachment bolts into the threaded inserts in the head end of the bed.